


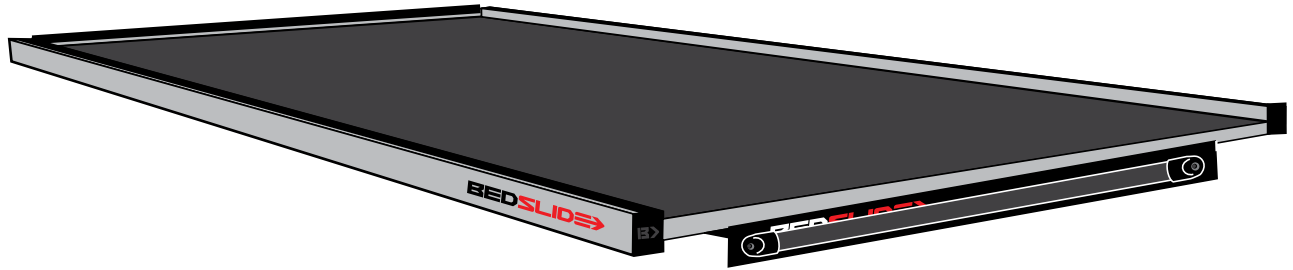

Adventure Half-slide



KIT CONTENTS



Heavy!
Team Lift!



Caution

HARDWARE KIT

- [4] MOUNT BLOCK KITS
- [4] D-RING TIE-DOWN KITS
- [4] 5/16" x 2" BOLTS
- [1] RIV NUT TOOL
- [4] RIV NUT ANCHORS
- [1] LOCKTITE® PACKET



NOTE: Ensure truck bed is clean and free of any cargo prior to installation.

TOOLS REQUIRED



1/2" WRENCH
& SOCKET



9/16" WRENCH
& SOCKET



1/8" ALLEN KEY




UTILITY KNIFE


NOTE: READ INSTRUCTIONS COMPLETELY BEFORE ATTEMPTING INSTALLATION.

STEP 1. INSERT (4) MOUNT BLOCKS INTO BEDTRAX (REAR HANDLE END)

Loosen set screws on both plastic end caps located at the rear (tailgate end) of the BEDTRAX. Remove end caps and insert (2) MOUNT BLOCKS down each side of the BEDTRAX. Re-install the (2) plastic end caps and tighten the set screw with a 1/8" allen key.

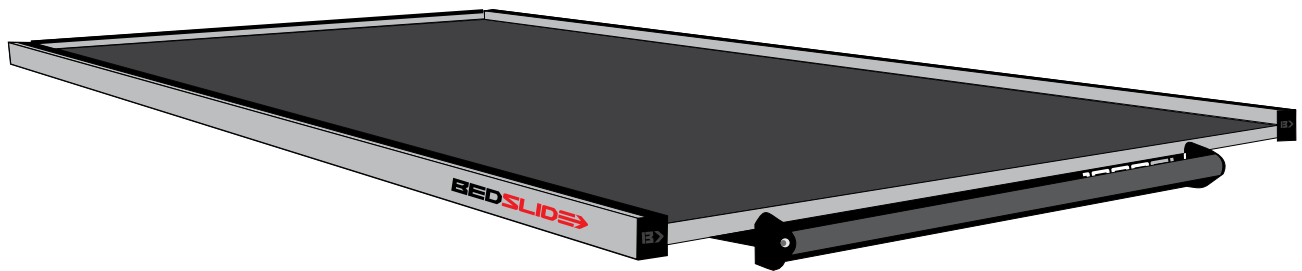


1/8" ALLEN KEY

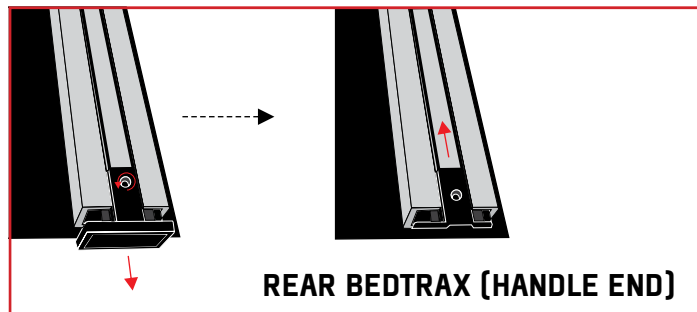


STEP 2. POSITION BEDSLIDE IN TRUCK BED

Place assembled BEDSLIDE in truck bed on the driver's side, center or passenger's side. Next make sure the tailgate clears the BEDSLIDE when the tailgate is closed and that the BEDSLIDE does not make contact with the tailgate when slid open.

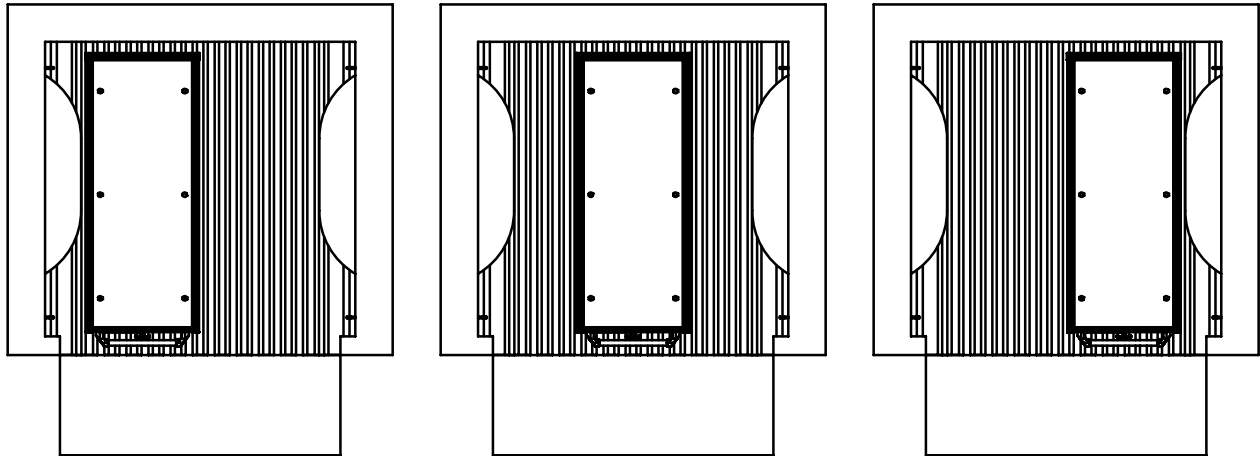

STEP 3. SEPARATE SLIDING TOP FRAME FROM THE BASE

Slowly move the upper tray out from a closed position. Fully extend the BEDSLIDE and remove the top frame and deck by lifting up and out. The welded safety stops must go up and over the rear roller bearings and spacer guides in order for the top frame and deck to release. **This step will require 2 people to help with the lift!** Avoid shifting hole placement. Mark the mounting holes at the cab end and center cross member. **Use the hole that rests on the highest part of the truck bed floor.**

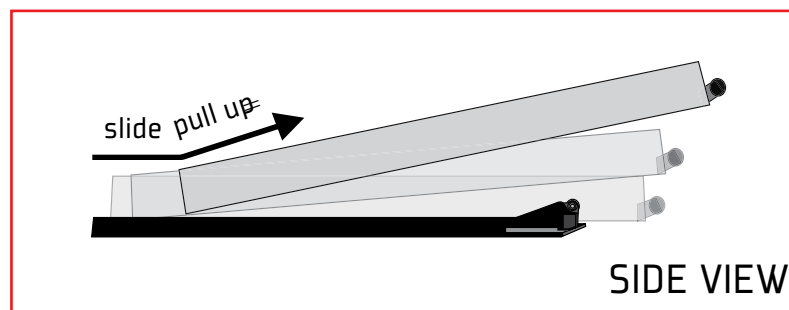


SIDE VIEW

STEP 4. INSTALL (4) RIV NUTS

Move the BEDSLIDE base frame to access the [4] marked holes for the center cross member. Drill through the bed using the 1/2" drill bit. Next, insert a 5/16" bolt through the riv nut tool and into a riv nut. Insert the assembly into a mounting hole. Tighten the bolt while holding the riv nut tool with a 1/2" wrench, making sure the assembly sits flush with the bed. As you tighten the bolt the riv nut will compress from underneath and secure to the bed. Repeat to the remaining hole.

Do not overtighten! Do not use air impact tools!

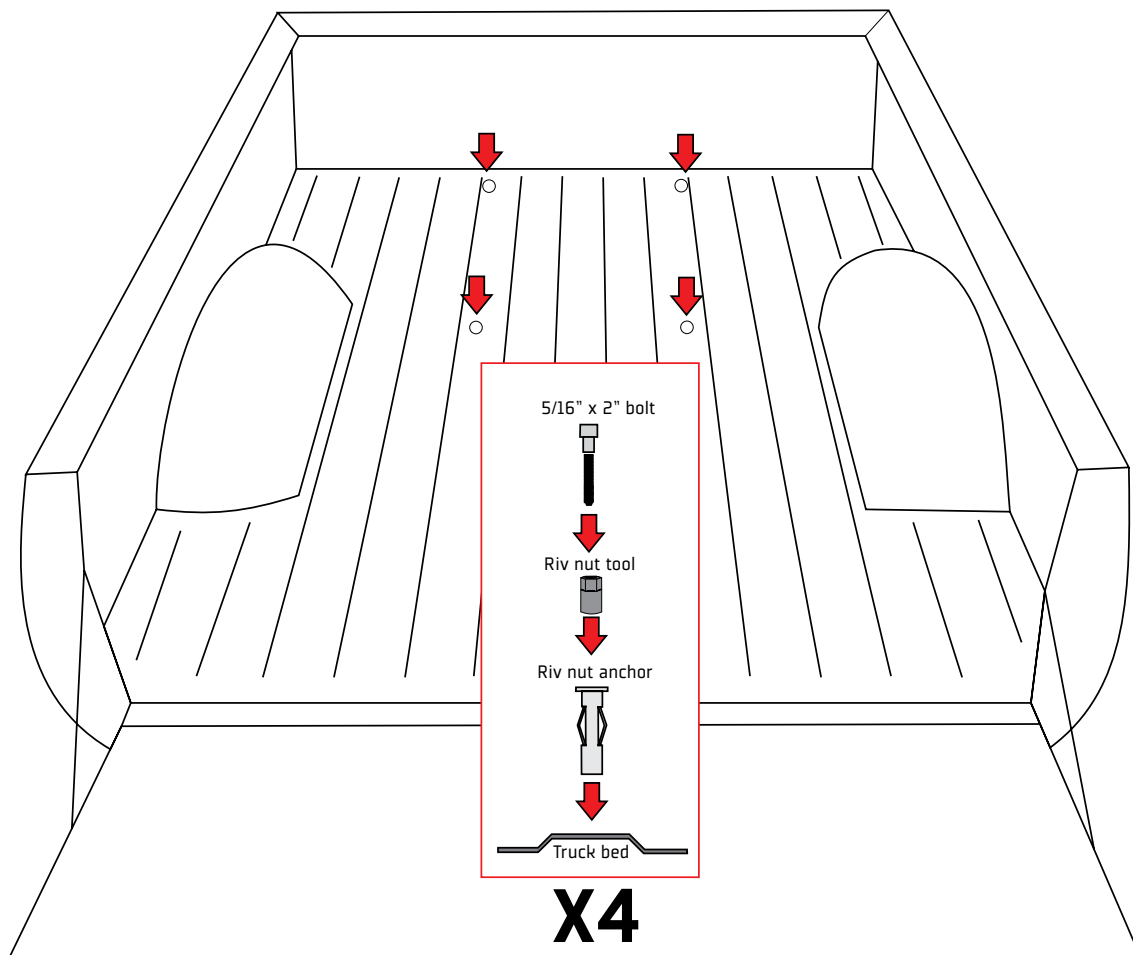


DO NOT OVERTIGHTEN.

STEP 5. RE-INSTALL BASE FRAME AND BOLT DOWN

Re-install the BEDSLIDE base frame in the truck bed, by aligning each mount hole with each riv nut in the bed. Bolt down at each mounting location using a 5/16" x 2" bolt.


STEP 6. RE-INSTALL SLIDING TOP FRAME AND DECK

Re-install the top sliding frame into the base by placing top frame over the rear bearings and sliding the frame forward to the stowed position. **This step will require 2 people to help with the lift!**

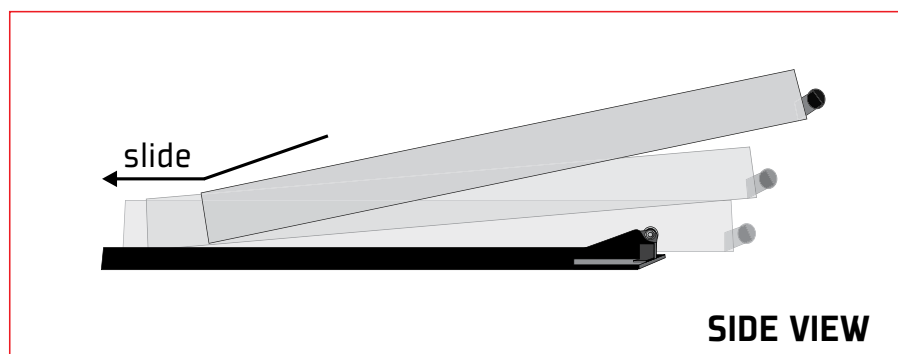

STEP 7. PROTECTIVE FILM REMOVAL

Pull a corner of the protective film and slowly pull it away from the die cut decals on each side of the tie down rails. **If the film lifts up with a letter attached, position back in place and rub with a card (bank card) or even your hand, so the decal adheres to the surface of the tie-down rail.**

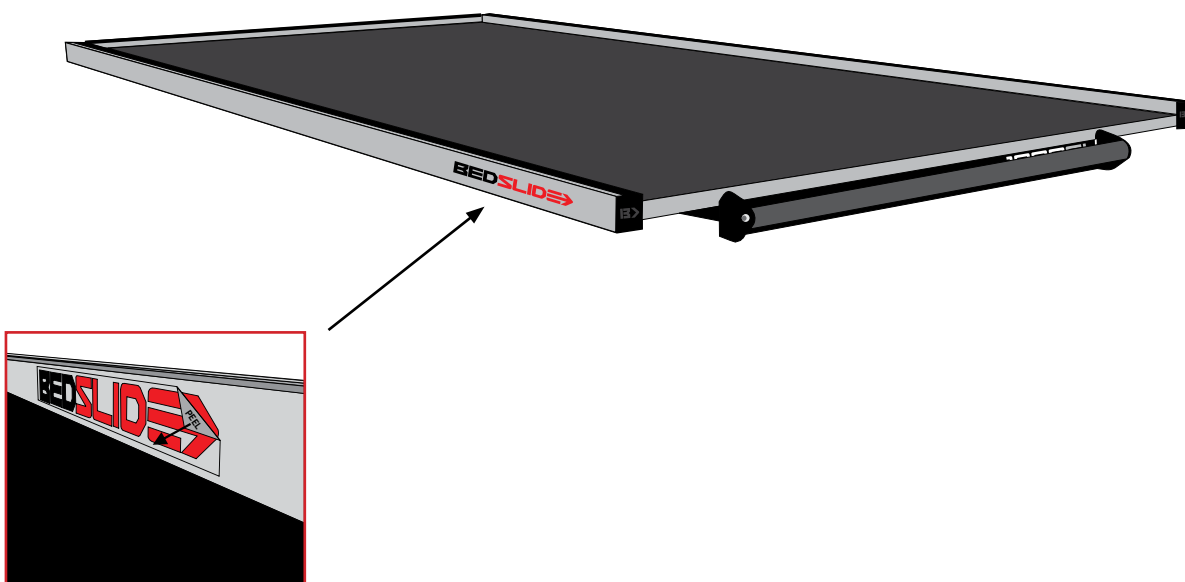


BEDSLIDE ADVENTURE – HALF SLIDE

PROPER BEDSLIDE® OPERATION

Proper operation will ensure many years of great service from your BEDSLIDE.

Below are 4 easy steps for proper operation:

1. Pull T-handle against the grab bar
2. With both hands firmly on the bar handle, slide to desired extension
3. Release handle and ensure it is in a locked position
4. Reverse steps to retract

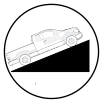

Do not operate on steep inclines!

Failure to do so can result in a runaway slide if the vehicle is on an incline.



Do not load the BEDSLIDE beyond it's weight capacity!

Overloading the unit may cause damage to the steel frame or roller bearings.



Keep weight evenly distributed!

Improper loading may cause damage to the frame or roller bearings.



Do not drive in the extended position!

It is not safe and may cause damage to the latching pin or cause serious damage to the BEDSLIDE frame.



Avoid fuel, oil, and chemical spills on the deck surface!

Prolonged exposure to fuel or chemicals will result in permanent stains on the deck surface. Wipe away immediately to avoid deck damage.

THANKS for choosing BEDSLIDE!

We truly appreciate your purchase and welcome you to the BEDSLIDE family. We'd love to see your set-up in action. Show off your vehicle and the new BEDSLIDE by posting a picture on our Facebook or Instagram pages. Tag us and let others see how you work smarter, not harder with BEDSLIDE. When posting content using #BEDSLIDE, you're granting us permission to feature your photos, videos, and captions on our website, social media, and other marketing materials, with credit to you. Thanks for being part of the BEDSLIDE community!