


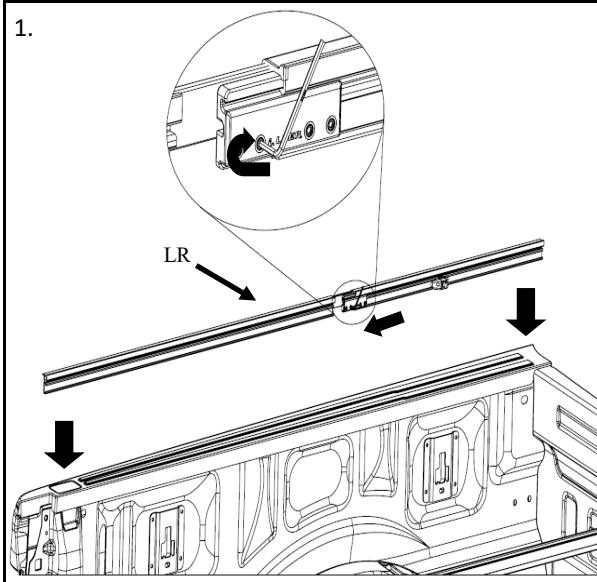
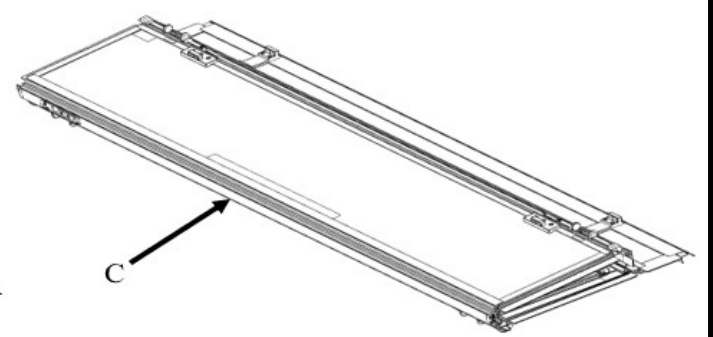
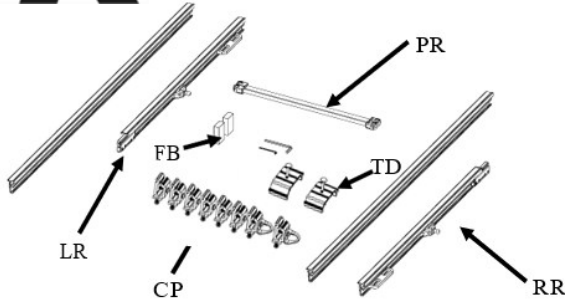


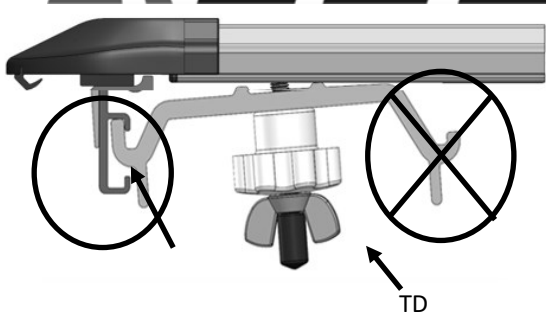


Connect split rail (LR, RR)
Conecte el riel dividido
Connecter le rail fendu

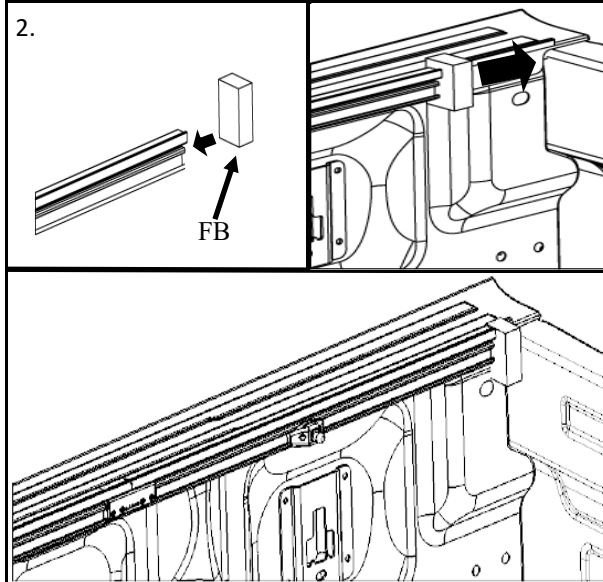


Push forward to bulkhead (LR, RR, FB)
Empuje hacia el mamparo
Pousser contre le mur

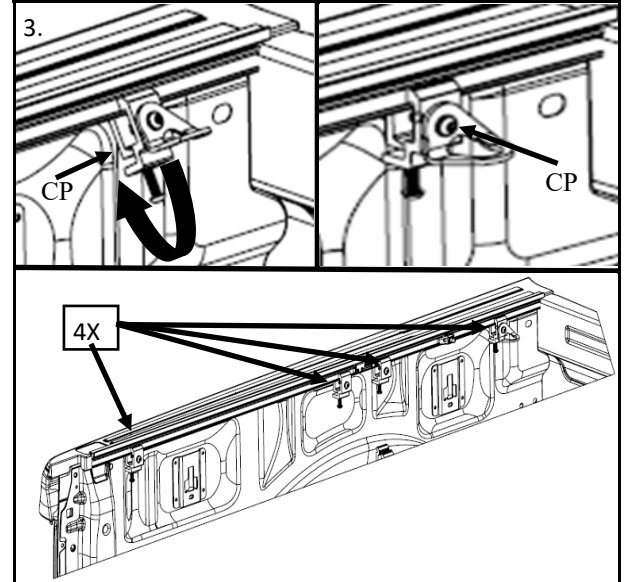


Install Clamps (CP)
Instalar abrazaderas
Installer les attaches

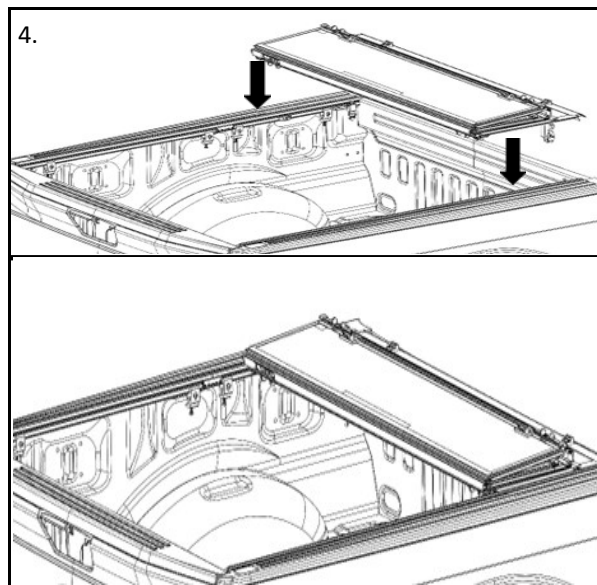


Place cover (CP)
Colocar cubierta
Placez le couvercle

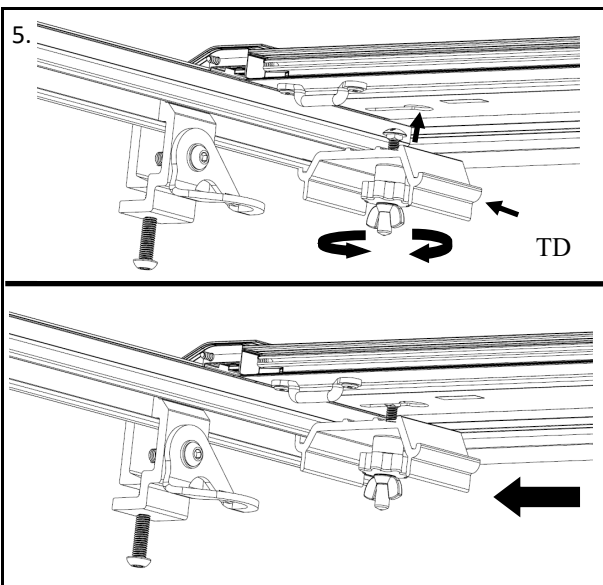


Install tie-down (TD)
Instalar gancho
Installer l'ancrage

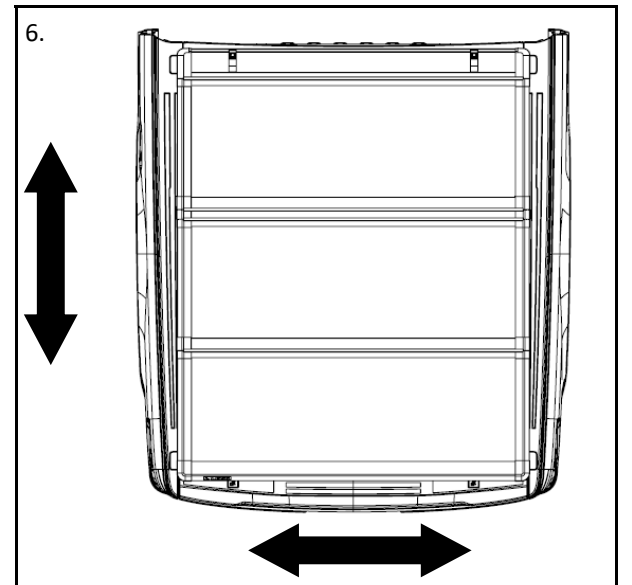


Unfold/adjust cover (C)
Despliegue y ajuste la cubierta
Déplier et ajuster le couvercle

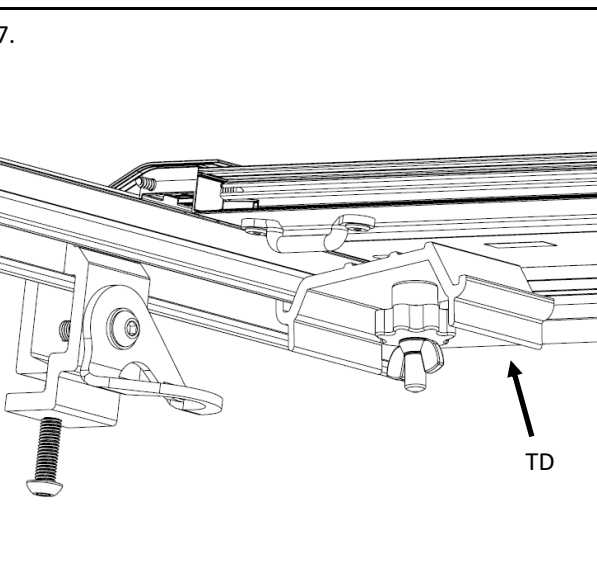

Tighten tie-down (TD)
Apriete el gancho
Attachez l'ancre

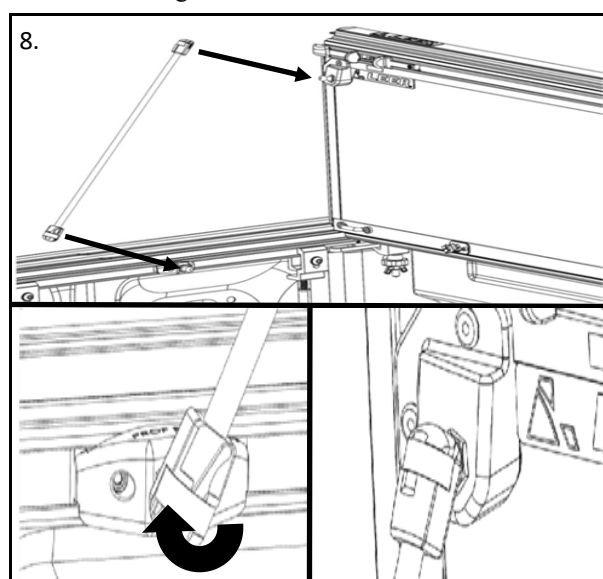

Install prop rod (PR)
Instalar varilla de apoyo
Installer la tige de prop

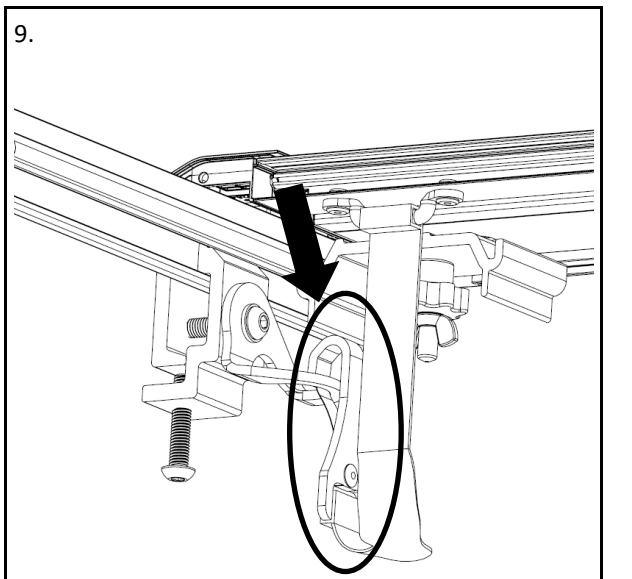

Install secondary tie-down (SD)
Instalar gancho secundario
Installer le crochet secondaire

TAB ADJUSTMENT

Tab Location	Tab Mounting	Other Clamps			
13mm or 0.5"		GM/Chevrolet	Toyota Tacoma	Toyota Tundra	Ford Ranger Shims

* Clamps vary by model

Go to LEER.COM
for more infor-
mation!
¡Visite LEER.COM
para más informa-
ción!