


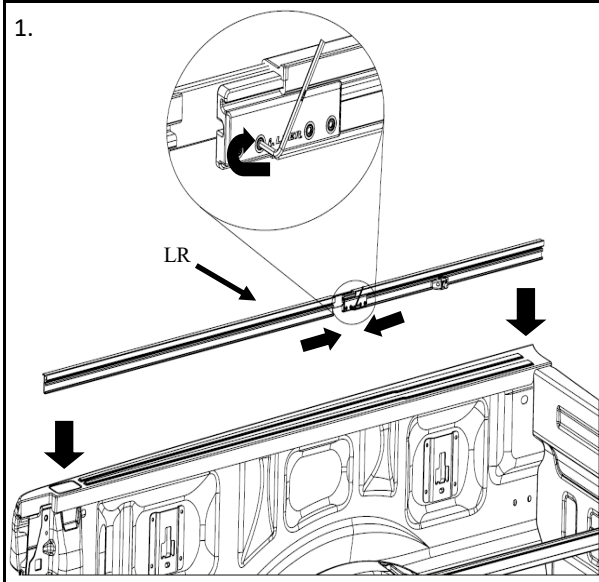
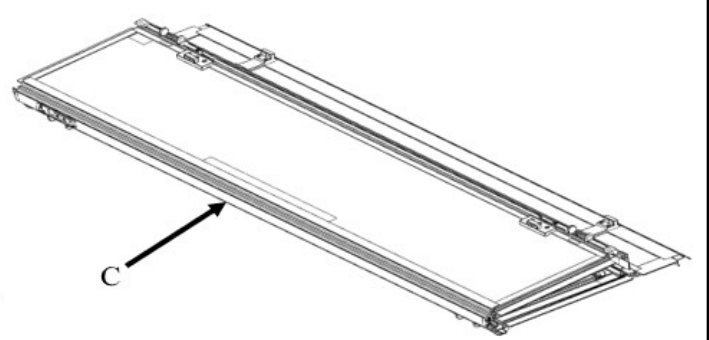


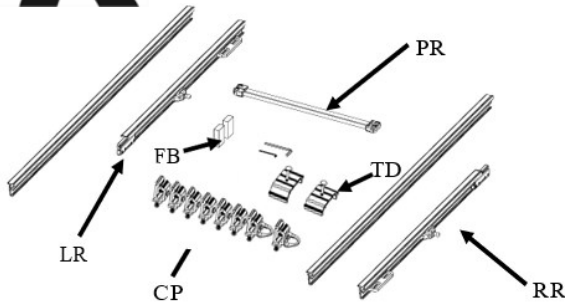


HF650M Installation Manual

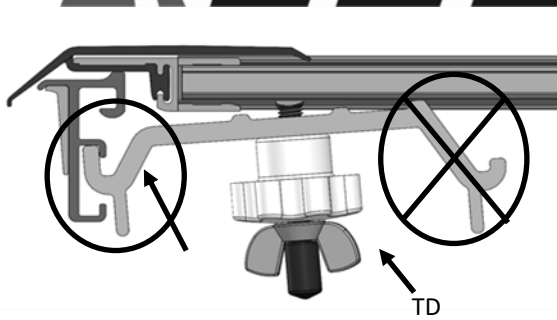


1. Connect split rail (LR, RR)
Conecte el riel dividido
Connecter le rail fendu

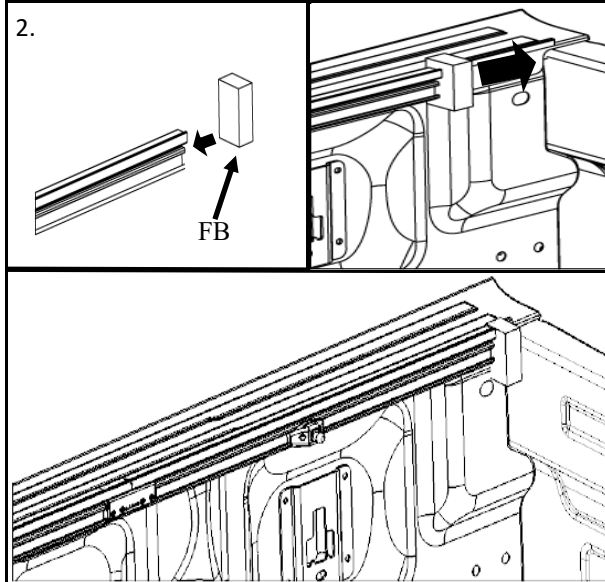


2. Push forward to bulkhead (LR, RR, FB)
Empuje hacia el mamparo
Pousser contre le mur

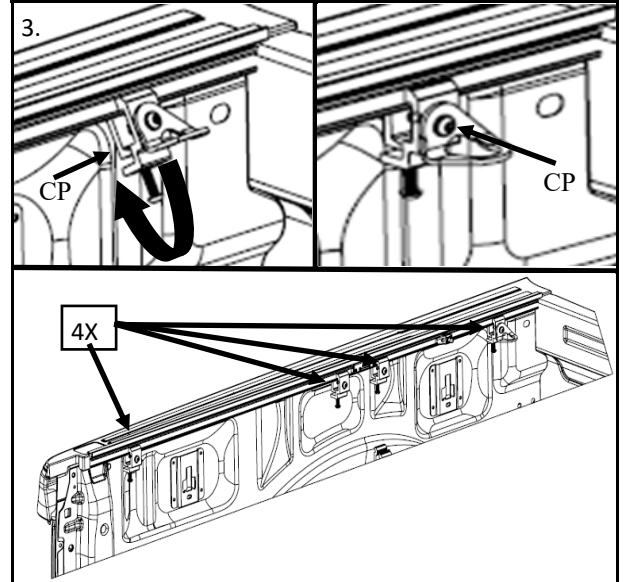


3. Install Clamps (CP)
Instalar abrazaderas
Installer les attaches

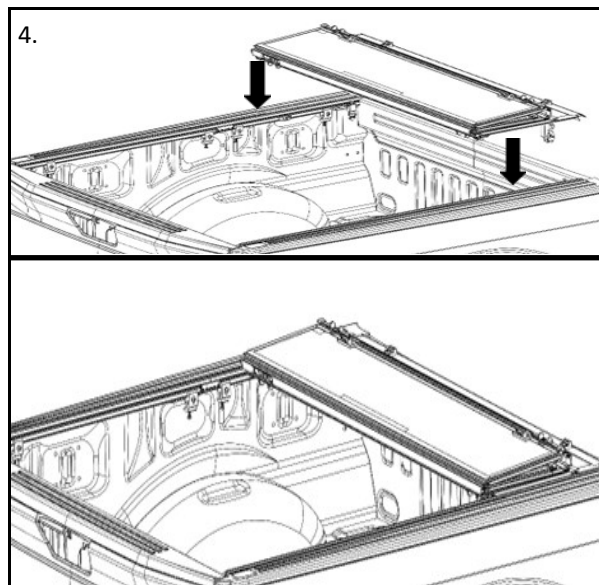


4. Place cover (CP)
Colocar cubierta
Placez le couvercle

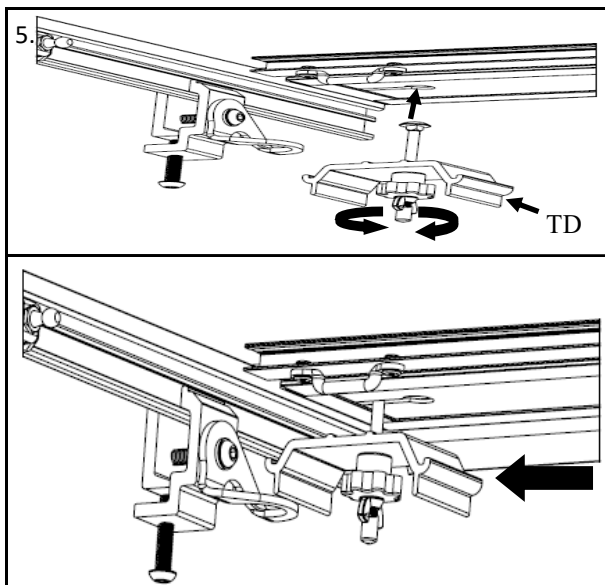


5. Install tie-down (TD)
Instalar gancho
Installer l'ancrage

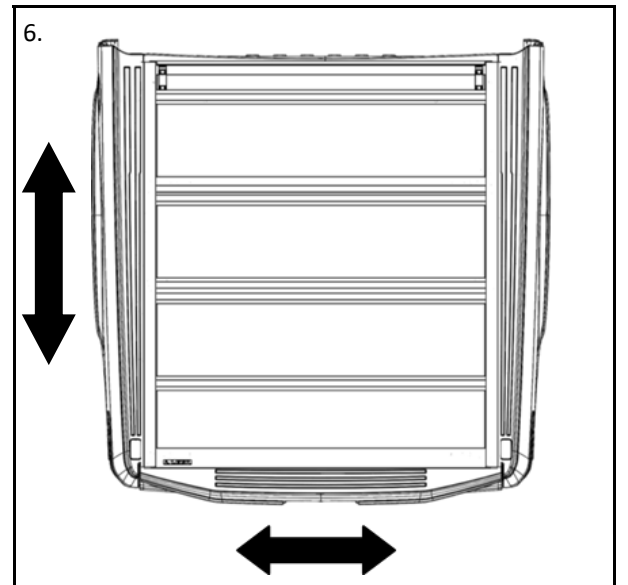


6. Unfold/adjust cover (C)
Despliegue y ajuste la cubierta
Déplier et ajuster le couvercle

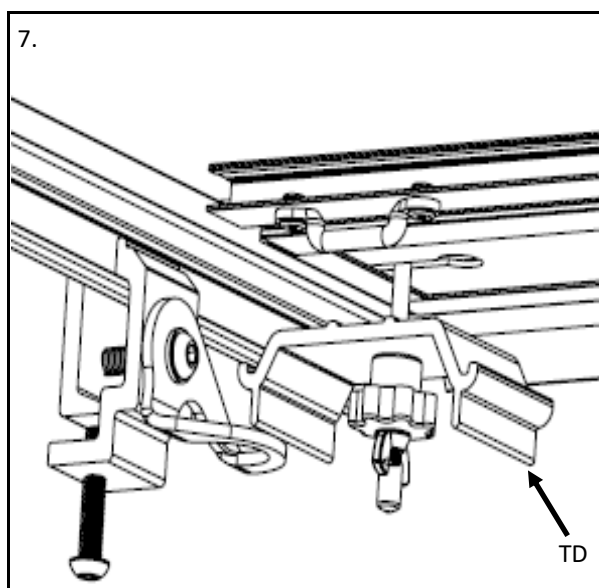


7. Tighten tie-down (TD)
Apriete el gancho
Attachez l'ancre

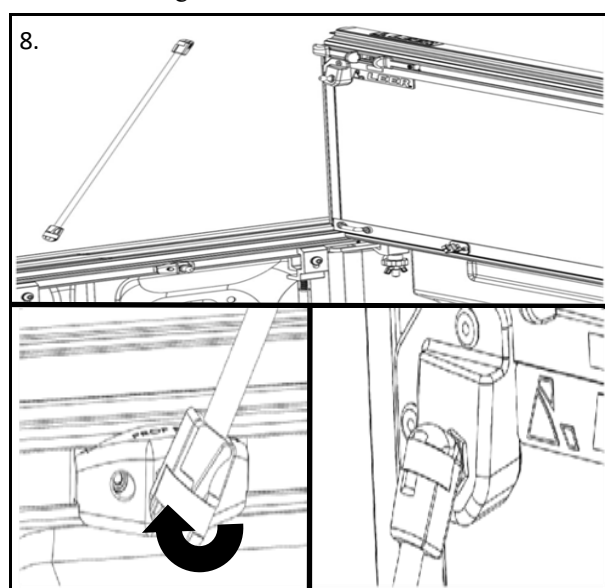


8. Install prop rod (PR)
Instalar varilla de apoyo
Installer la tige de prop

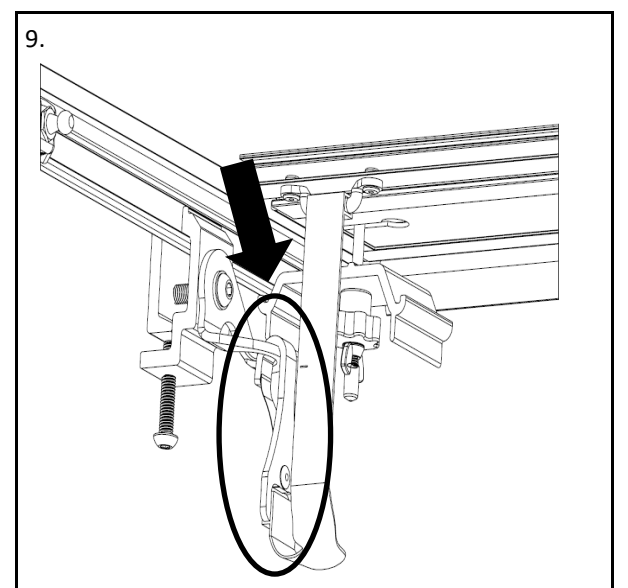


9. Install secondary tie-down (SD)
Instalar gancho secundario
Installer le crochet secondaire

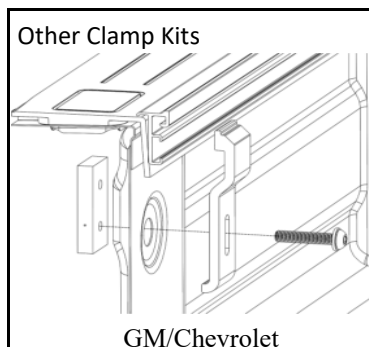

GM/Chevrolet

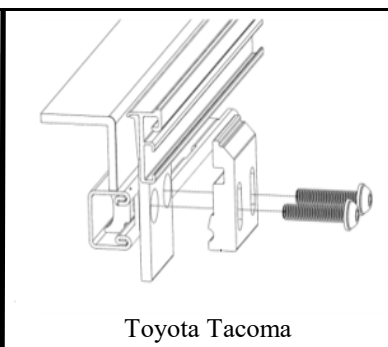

Toyota Tacoma

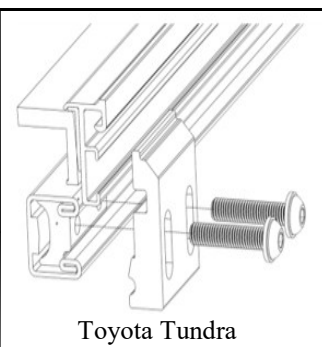

Toyota Tundra



Ford Ranger Shims

Go to LEER.COM for more information!

¡Visite LEER.COM para más información!

Allez sur LEER.COM pour plus d'informations!

* Clamps vary by model